

IH NORMAL MENU

V1.743

(M) NORMAL (M)

- TRACK Select tracking rate
 - KING ... and adjust
 - SOLAR ... and adjust
 - LUNAR Differential adjust RA and DEC
 - TRACK

- EVNT View stored events
 - VIEW
 - DUMP
 - ERASE

- INFO Software version numbers, last error message
 - CLEAR
 - REBOOT

- HOME
 - Does a goto if calibrated.
 - OFF
 - UNPARK Motors are STOP until UNPARK