

IH POWER UP OPTIONS

V1.743

POWER UP + (M)

FACTORY MODE MENU

POWER UP + (1) + (2)

Programme IH2 code through Serial port
Follow prompts in BOOTLOAD.EXE (pc)

POWER UP + (3)

Exercise DRIVEBOX serial link (IH2)

ALL leads can be plugged or unplugged when powered
The programme WINDISP (PC based) will exercise the HOST link.