

IH SETUP MENU

V1.743



RTC	
└─MODIFY	DATE and TIME in U.T.
SITES	Select or Modify
└─A	
└─└─MODIFY	SET Latitude to the nearest arcsec
└─B	
└─└─MODIFY	SET Longitude to nearest arcsec (-ve = EAST)
└─C	
└─└─MODIFY	
└─D	
└─└─MODIFY	
DECDIR	Convenient function for altering DEC motor sense
HORIZ	Set LOCAL HORIZON in degrees
SETPK	Use current position as PARK position
GPS*	FACTORY FITTED OPTION
└─TIME	Reset RTC to this
└─POS	Offer coordinates to use in SITEx
└─ECHO	Echo NMEA string to HOST
FOCUS*	AWR Focus module only
└─UP	Manual move OUT
└─DOWN	Manual move IN
└─ZERO	Calibrate by zeroing at this position
└─GO	GOTO a position

TRACKING will stop if the coordinates go below the LOCAL HORIZON