

IH FACTORY MENU

V1.70

POWER UP + (M)

FACTORY

- USTEP
 - RA
 - RATIO - Encoder counts in full circle
 - SLEW - Degrees per second
 - RAMP - Acceleration / Deceleration time
 - DIR SENSE - Motor rotation sense
 - MSTEPS - Microsteps in encoder count
 - BACKLASH - Arcseconds
 - DEC
 - RATIO
 - SLEW
 - RAMP
 - DIR SENSE
 - MSTEPS
 - BACKLASH
- MAX-HA - Telescope MAX Hour Angle
- MAXDEC - Telescope MAX DEC
- XFREQ - Drivebox frequency
- MREV - Meridian reversal (for GEM mounts)
- DUMP
- STATUS - Firmware version numbers
 - CLEAR
 - REBOOT - Back to MAIN MENU
- COMMS - Host communications protocol
 - DEBUG
 - LX200
 - AWR
- DEFAULT - Initialize all RAM variables
- TESTS - Hardware handset tests

DO NOT test the FLASH if DATABASE INSTALLED